


[High Voltage Equipment](#) In Stock and Ready for Shipment Delivered and Installed www.equisales.com

[Circuit Breaker Supplier](#) Find Circuit Breakers Of All Brands And Models. Request A Quote Now! www.Relectric.com/

[Magnetic Pulse Generator](#) Don't Buy A 'Rife Machine' til You Read This Controversial Rife Report www.ElectroDetox.c

Ads by Google

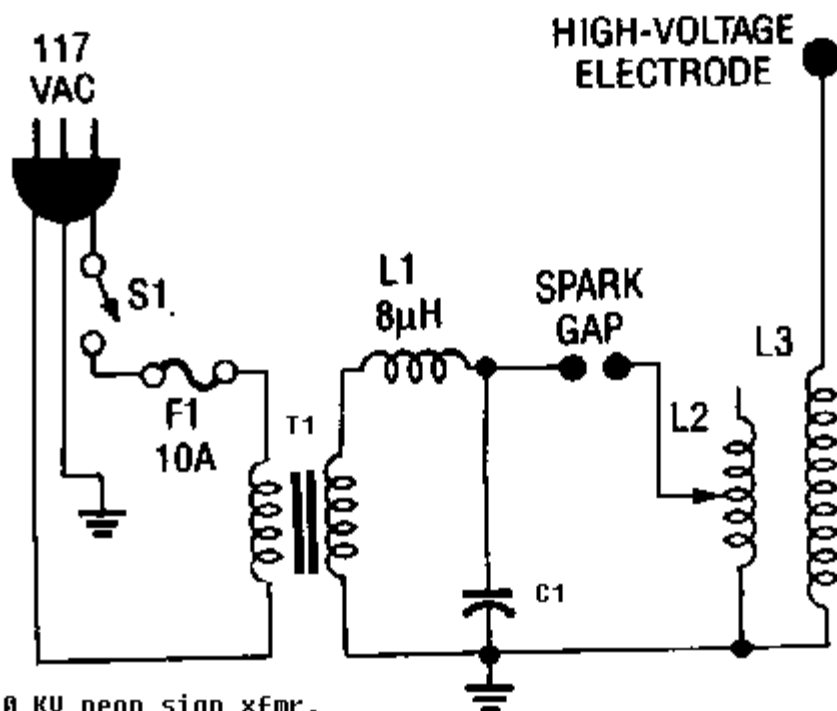

T1 = 5 to 10 KV neon sign xfmr.

C1 = 0.003 to 0.005 uf, rated twice T1 secondary voltage.

L1 = 8uh 10A inductor or 60 turns #14 solid on 1/4" ferrite 4" long.

L2 = 10T #10, 8" PUC form. mount over cold end of L3. Tap every 1.25 turns.

L3 = 400 T #24 magnet wire on 4" dia, 12" long form. varnish or wrap with tape.

GAP = 1/2 to 1" round head bolts or ball bearings. polished somewhat see picture file 'tesla02d.pcx' for alternate gap design.

