# Hydraulic head

From Wikipedia, the free encyclopedia

**Hydraulic head** or **piezometric head** is a specific measurement of liquid pressure above a geodetic datum.<sup>[1][2]</sup>


It is usually measured as a liquid surface elevation, expressed in units of length, at the entrance (or bottom) of a piezometer. In an aquifer, it can be calculated from the depth to water in a piezometric well (a specialized water well), and given information of the piezometer's elevation and screen depth. Hydraulic head can similarly be measured in a column of water using a standpipe piezometer by measuring the height of the water surface in the tube relative to a common datum. The hydraulic head can be used to determine a *hydraulic gradient* between two or more points.

# Hydraulic head Hydraulic head Ferstock Ferstock Turbing River

Available difference in hydraulic head across a hydroelectric dam, before head losses due to turbines, wall friction and turbulence.

#### **Contents**

- 1 "Head" in fluid dynamics
- 2 Components of hydraulic head
  - 2.1 Fresh water head
- 3 Hydraulic gradient
- 4 Hydraulic head in groundwater
  - 4.1 Atmospheric pressure
- 5 Head loss
- 6 Analogs to other fields
- 7 See also
- 8 Notes
- 9 References

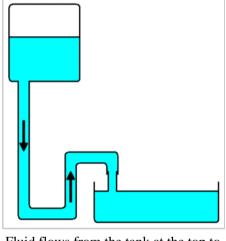

Fluid flows from the tank at the top to the basin at the bottom under the pressure of the hydraulic head.

# "Head" in fluid dynamics

In fluid dynamics, *head* is a concept that relates the energy in an incompressible fluid to the height of an equivalent static column of that fluid. From Bernoulli's Principle, the total energy at a given point in a fluid is the energy associated with the movement of the fluid, plus energy from static pressure in the fluid, plus energy from the height of the fluid relative to an arbitrary datum. Head is expressed in units of height such as meters or feet.

The *static head* of a pump is the maximum height (pressure) it can deliver. The capability of the pump at a certain RPM can be read from its Q-H curve (flow vs. height).

A common misconception is that the head equals the fluid's energy per unit weight, while, in fact, the term with pressure does not represent any type of energy (in the Bernoulli equation for an incompressible fluid this term represents work of pressure forces). Head is useful in specifying centrifugal pumps because their pumping characteristics tend to be independent of the fluid's density.

1 of 5 1/3/2017 5:50 PM

There are four types of head used to calculate the total head in and out of a pump:

- 1. *Velocity head* is due to the bulk motion of a fluid (kinetic energy). Its pressure head correspondent is the dynamic pressure.
- 2. Elevation head is due to the fluid's weight, the gravitational force acting on a column of fluid.
- 3. *Pressure head* is due to the static pressure, the internal molecular motion of a fluid that exerts a force on its container.
- 4. *Resistance head* (or *friction head* or Head Loss) is due to the frictional forces acting against a fluid's motion by the container.

## Components of hydraulic head

A mass free falling from an elevation z > 0 (in a vacuum) will reach a speed

$$v = \sqrt{2gz}$$
, when arriving at elevation z=0, or when we rearrange it as a head:  $h = \frac{v^2}{2g}$ 

where

g is the acceleration due to gravity

The term  $\frac{v^2}{2g}$  is called the *velocity head*, expressed as a length measurement. In a flowing fluid, it represents the energy of the fluid due to its bulk motion.

The total hydraulic head of a fluid is composed of *pressure head* and *elevation head*.<sup>[1][2]</sup> The pressure head is the equivalent gauge pressure of a column of water at the base of the piezometer, and the elevation head is the relative potential energy in terms of an elevation. The *head equation*, a simplified form of the Bernoulli Principle for incompressible fluids, can be expressed as:

$$h = \psi + z$$

where

 $\boldsymbol{h}$  is the hydraulic head (Length in m or ft), also known as the piezometric head.

 $\psi$  is the pressure head, in terms of the elevation difference of the water column relative to the piezometer bottom (Length in m or ft), and

z is the elevation at the piezometer bottom (Length in m or ft)

In an example with a 400 m deep piezometer, with an elevation of 1000 m, and a depth to water of 100 m: z = 600 m,  $\psi = 300$  m, and h = 900 m.

The pressure head can be expressed as:

$$\psi = \frac{P}{\gamma} = \frac{P}{\rho q}$$

where

**P** is the gauge pressure (Force per unit area, often Pa or psi),

 $\gamma$  is the unit weight of the liquid (Force per unit volume, typically N·m<sup>-3</sup> or lbf/ft³),  $\rho$  is the density of the liquid (Mass per unit volume, frequently kg·m<sup>-3</sup>), and g is the gravitational acceleration (velocity change per unit time, often m·s<sup>-2</sup>)

#### Fresh water head

The pressure head is dependent on the density of water, which can vary depending on both the temperature and chemical composition (salinity, in particular). This means that the hydraulic head calculation is dependent on the density of the water within the piezometer. If one or more hydraulic head measurements are to be compared, they need to be standardized, usually to their *fresh water head*, which can be calculated as:

$$h_{ ext{fw}} = \psi rac{
ho}{
ho_{ ext{fw}}} + z$$

where

 $h_{\rm fw}$  is the fresh water head (Length, measured in m or ft), and  $\rho_{\rm fw}$  is the density of fresh water (Mass per unit volume, typically in kg·m<sup>-3</sup>)

# Hydraulic gradient

The *hydraulic gradient* is a vector gradient between two or more hydraulic head measurements over the length of the flow path. For groundwater, it is also called the 'Darcy slope', since it determines the quantity of a Darcy flux or discharge. It also has applications in open-channel flow where it can be used to determine whether a reach is gaining or losing energy. A dimensionless hydraulic gradient can be calculated between two points with known head values as:

$$i = rac{dh}{dl} = rac{h_2 - h_1}{ ext{length}}$$

where

i is the hydraulic gradient (dimensionless),
dh is the difference between two hydraulic heads (Length, usually in m or ft), and
dl is the flow path length between the two piezometers (Length, usually in m or ft)

The hydraulic gradient can be expressed in vector notation, using the del operator. This requires a hydraulic head field, which can only be practically obtained from a numerical model, such as MODFLOW for groundwater or Standard Step or HEC-RAS for open channels. In Cartesian coordinates, this can be expressed as:

$$abla h = \left(rac{\partial h}{\partial x},rac{\partial h}{\partial y},rac{\partial h}{\partial z}
ight) = rac{\partial h}{\partial x}\mathbf{i} + rac{\partial h}{\partial y}\mathbf{j} + rac{\partial h}{\partial z}\mathbf{k}$$

This vector describes the direction of the groundwater flow, where negative values indicate flow along the dimension, and zero indicates 'no flow'. As with any other example in physics, energy must flow from high to low, which is why the flow is in the negative gradient. This vector can be used in conjunction with Darcy's law and a tensor of hydraulic conductivity to determine the flux of water in three dimensions.

3 of 5 1/3/2017 5:50 PM

# Hydraulic head in groundwater

The distribution of hydraulic head through an aquifer determines where groundwater will flow. In a hydrostatic example (first figure), where the hydraulic head is constant, there is no flow. However, if there is a difference in hydraulic head from the top to bottom due to draining from the bottom (second figure), the water will flow downward, due to the difference in head, also called the *hydraulic gradient*.


#### Atmospheric pressure

Even though it is convention to use gauge pressure in the calculation of hydraulic head, it is more correct to use total pressure (gauge pressure + atmospheric pressure), since this is truly what drives groundwater flow. Often detailed observations of barometric pressure are not available at each well through time, so this is often disregarded (contributing to large errors at locations where hydraulic gradients are low or the angle between wells is acute.)

The effects of changes in atmospheric pressure upon water levels observed in wells has been known for many years. The effect is a direct one, an increase in atmospheric pressure is an increase in load on the water in the aquifer, which increases the depth to water (lowers the water level elevation). Pascal first qualitatively observed these effects in the 17th century, and they were more

rigorously described by the soil physicist Edgar Buckingham (working for the United States Department of Agriculture (USDA)) using air flow models in 1907.

# Relation between heads for a hydrostatic case and a downward flow case.

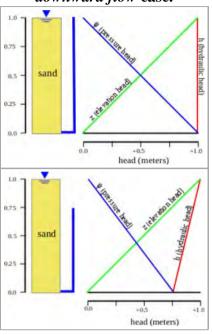

#### **Head loss**

In any real moving fluid, energy is dissipated due to friction; turbulence dissipates even more energy for high Reynolds number flows. This dissipation, called *head loss*, is divided into two main categories, "major losses" associated with energy loss per length of pipe, and "minor losses" associated with bends, fittings, valves, etc. The most common equation used to calculate major head losses is the Darcy–Weisbach equation. Older, more empirical approaches are the Hazen–Williams equation and the Prony equation.

For relatively short pipe systems, with a relatively large number of bends and fittings, minor losses can easily exceed major losses. In design, minor losses are usually estimated from tables using coefficients or a simpler and less accurate reduction of minor losses to equivalent length of pipe.

# Analogs to other fields

Hydraulic head is a measure of energy, and has many analogs in physics and chemistry, where the same mathematical principles and rules apply:

- *Hydraulic head* is analogous to:
  - magnetic monopole
  - electric charge
  - heat (i.e., temperature)

4 of 5

- concentration
- A continuous field of the hydraulic head is analogous to:
  - an electric field
  - a magnetic field
- Similar differential operators can be applied to the fields, to find:
  - the gradient, or the direction of flow
  - the divergence of flow
  - the curl, or if the field is rotating

#### See also

- Borda–Carnot equation
- Dynamic pressure
- Total dynamic head

#### **Notes**

- 1. Mulley, Raymond (2004), *Flow of Industrial Fluids: Theory and Equations*, CRC Press, ISBN 0849327679, 410 pages. See pp. 43–44.
- 2. Chanson, Hubert (2004), *Hydraulics of Open Channel Flow: An Introduction*, Butterworth–Heinemann, ISBN 0750659785, 650 pages. See p. 22.

#### References

- Bear, J. 1972. *Dynamics of Fluids in Porous Media*, Dover. ISBN 0-486-65675-6.
- for other references which discuss hydraulic head in the context of hydrogeology, see that page's further reading section

Retrieved from "https://en.wikipedia.org/w/index.php?title=Hydraulic\_head&oldid=750919836"

Categories: Aquifers | Water | Hydrology | Fluid dynamics | Water wells

- This page was last modified on 22 November 2016, at 06:48.
- Text is available under the Creative Commons Attribution-ShareAlike License; additional terms may apply. By using this site, you agree to the Terms of Use and Privacy Policy. Wikipedia® is a registered trademark of the Wikimedia Foundation, Inc., a non-profit organization.

5 of 5 1/3/2017 5:50 PM